
 


ALink for Main Canopies
 PN: P 1487-00 (Gray Bartack)






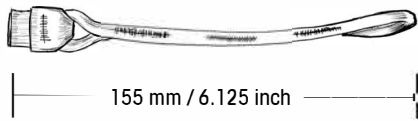


ALink for Reserve Canopies
 PN: P 1487-01 (Red Bartack)



Instructions for ALink Installation

Aerodyne Research, LLC: 1407 Flightline Blvd Unit 14 Deland, FL 32724. USA.
 +1-813-891-8300 www.flyaerodyne.com

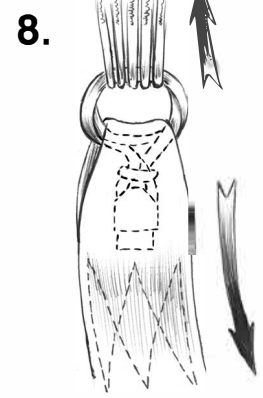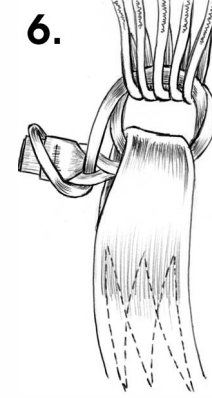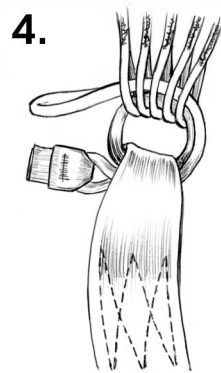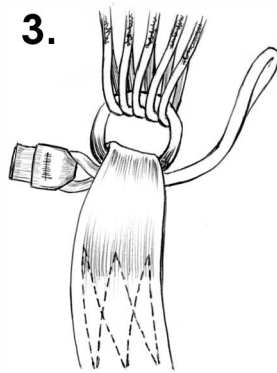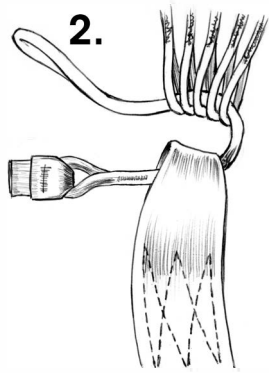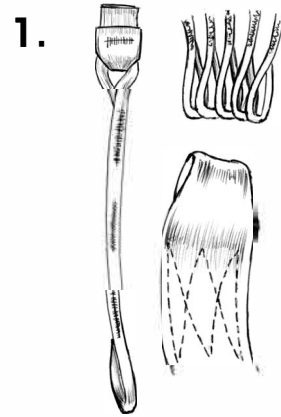

Pass the ALink thru the suspension line loops and riser as shown.

Pass the ALink loop thru the risers, as shown.

Pass the ALink loop thru the suspension lines one more time, as shown.

Pass the loop end thru the tab end, as shown.

Feed the loop back over the tab.

Larkshead, as shown. Pull tight, ensure the larkshead is secure.

Tuck the tab away as shown.

Ensure that you have passed the ALink thru all the suspension lines and that the suspension lines are clear to move.

Ensure that the ALink passes thru all the suspension line loops.

Check that the suspension lines are clear to move, make sure you have not passed the ALink in between the yarns of the lines.

WARNING



DO NOT pass the tab directly through the loop. Please follow steps 5 & 6 carefully.

Check that the suspension lines can move freely over the ALink and make sure you have not passed the ALink in between the yarns of the suspension lines.

WARNING



It's important to secure the tab in the webbing pocket by tacking the ALink in place with a single stitch of tacking cord through one side of the riser, and knotted in the middle.

NOTE: It is recommended you replace the ALinks with every new lineset. Check the ALinks for excessive wear and tear, and replace when necessary.